

## [December-2018Download Braindump2go 010-151 Dumps for Free[Q34-44

December/2018 Braindump2go 010-151 Exam Dumps with PDF and VCE New Updated Today! Following are some new 010-151 Real Exam Questions:1.|2018 Latest 010-151 Exam Dumps (PDF & VCE) 85Q&As

Download:<https://www.braindump2go.com/010-151.html>2.|2018 Latest 010-151 Exam Questions & Answers

Download:<https://drive.google.com/drive/folders/1XmUU3ShrjxsR7V1kWrqyVXLHj-GbSjf?usp=sharing>**QUESTION 34**What is the correct path to verify the Overall Status of Chassis 1 | Server 3?  
A. Equipment Tab > Chassis > Chassis 1 > Servers > Server 3 Status tab  
B. Equipment Tab > Chassis > Chassis 1 > Servers > Server 3 General tab  
C. Equipment Tab > Chassis > Chassis 1 > Servers > Server 3 FSM tab  
D. Servers Tab > Chassis > Server 3 General tab  
E. Status Tab > Chassis > Chassis 1 > Servers > Server 3  
F. Admin Tab > Chassis > Chassis 1 > Servers > Server 3 General tab  
**Answer: B****QUESTION 35**If the Overall Status for a Cisco UCS B-Series Blade Server indicates a failure in the Cisco UCS Manager, such as discovery-failed, which statement is true?  
A. The server shuts down.  
B. The server automatically reboots reboot in 3 minutes.  
C. The endpoints on that server cannot be upgraded.  
D. The server is online, but the administrator cannot assign a service profile to that blade.  
**Answer: C****QUESTION 36**Which action should the administrator take before physically removing a blade server for maintenance or replacement?  
A. Force the server to shut down.  
B. Disassociate the service profile.  
C. Decommission the server.  
D. Perform a graceful shutdown of the server.  
**Answer: C****QUESTION 37**Which three statements about powering down a Cisco UCS C-Series Rack-Mount Server to perform maintenance or replacement are true? (Choose three.)  
A. Standby power mode: Power is supplied only to the service processor and the cooling fans, and it is safe to power off the server from this mode.  
B. Power status LED. Green indicates that the server is in main power mode and can be safely powered off.  
C. Graceful shutdown: Press and release the power button. The operating system performs a graceful shutdown, and the server goes to standby mode, which is indicated by an amber power status LED.  
D. Disconnect the power cords from the power supplies in your server to completely power off the server.  
E. Only an emergency shutdown can be performed using the power button on the server front panel.  
F. The Cisco UCS C-Series Rack-Mount Server has only one power mode.  
**Answer: ACD****QUESTION 38**Which three components are hot swappable in a Cisco UCS Blade Server and Chassis? (Choose three.)  
A. Fabric Extender  
B. Power supply  
C. Heat sink  
D. SAS Hard Drive  
E. 2x8GB Kit DIMMs  
F. Mezzanine card  
**Answer: ABD****QUESTION 39**Which five things should the administrator verify after performing maintenance or replacing a blade server? (Choose five.)  
A. blade server status  
B. hard drive status  
C. host OS boot status  
D. CPU status  
E. mezzanine card status  
F. memory DIMM status  
G. fan and power status  
**Answer: ABDEF****QUESTION 40**Which two statements about DIMM replacement in Cisco UCS Servers are true? (Choose two.)  
A. In blade servers, DIMMs can be installed in either 1, 2, 4, or 8 DIMMs per channel.  
B. Rack-mount and blade servers have memory fault LEDs that indicate which DIMM requires attention.  
C. In servers that require pairs of DIMMs, the pairs must be identical (manufacturer, size, part #, and so on).  
D. If the memory in a server is not fully populated, you can install DIMMs in any open slot.  
**Answer: AC****QUESTION 41**Which three tools are necessary to console into a Cisco UCS C-Series Rack-Mount Server? (Choose three.)  
A. Cisco DB-9-to-RJ-45 console cable  
B. laptop  
C. monitor  
D. keyboard  
E. KVM dongle  
F. USB serial adapter  
**Answer: CDE****QUESTION 42**After installation or replacement of a Cisco UCS C-Series Rack-Mount Server, the host does not boot. Which four options should be verified? (Choose four.)  
A. Verify the power source to the equipment.  
B. Check for loose HDD cables.  
C. Reseat the DIMMs, CPU, and PCI cards.  
D. Verify that power supplies are receiving power.  
E. Reseat the mezzanine card connector.  
F. Check the CPU sockets for bent pins.  
G. Check the Cisco IMC for fan faults.  
**Answer: ACDF****QUESTION 43**Which three firmware components does the Host Upgrade Utility upgrade? (Choose three.)  
A. Fabric Interconnect firmware  
B. LAN on Motherboard  
C. Cisco UCS Manager  
D. CIMCE  
E. System BIOS  
**Answer: BDE****QUESTION 44**Which two commands allow you to view the state of high availability between the two clustered Fabric Interconnects? (Choose two.)  
A. show cluster state extended  
B. show cluster extended-state  
C. show cluster HA status  
D. show cluster state  
**Answer: BD****!!!RECOMMEND!!!**1.|2018 Latest 010-151 Exam Dumps (PDF & VCE) 85Q&As Download:<https://www.braindump2go.com/010-151.html>2.|2018 Latest 010-151 Study Guide Video: YouTube Video: [YouTube.com/watch?v=Ww0fTKr9BCo](https://www.youtube.com/watch?v=Ww0fTKr9BCo)